
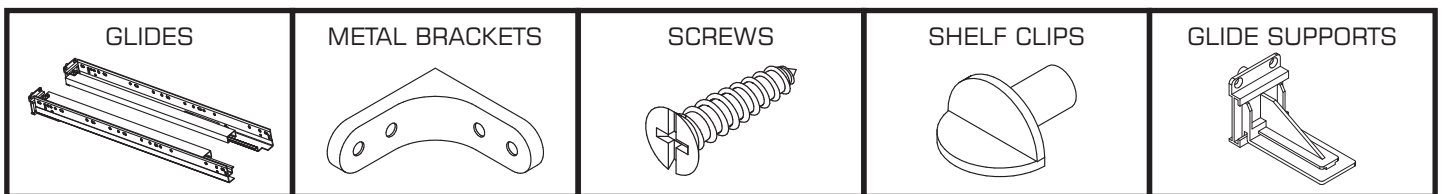



ASSEMBLING INSTRUCTIONS - BLIND CORNER BASE CABINET

BLIND CORNER BASE CABINET

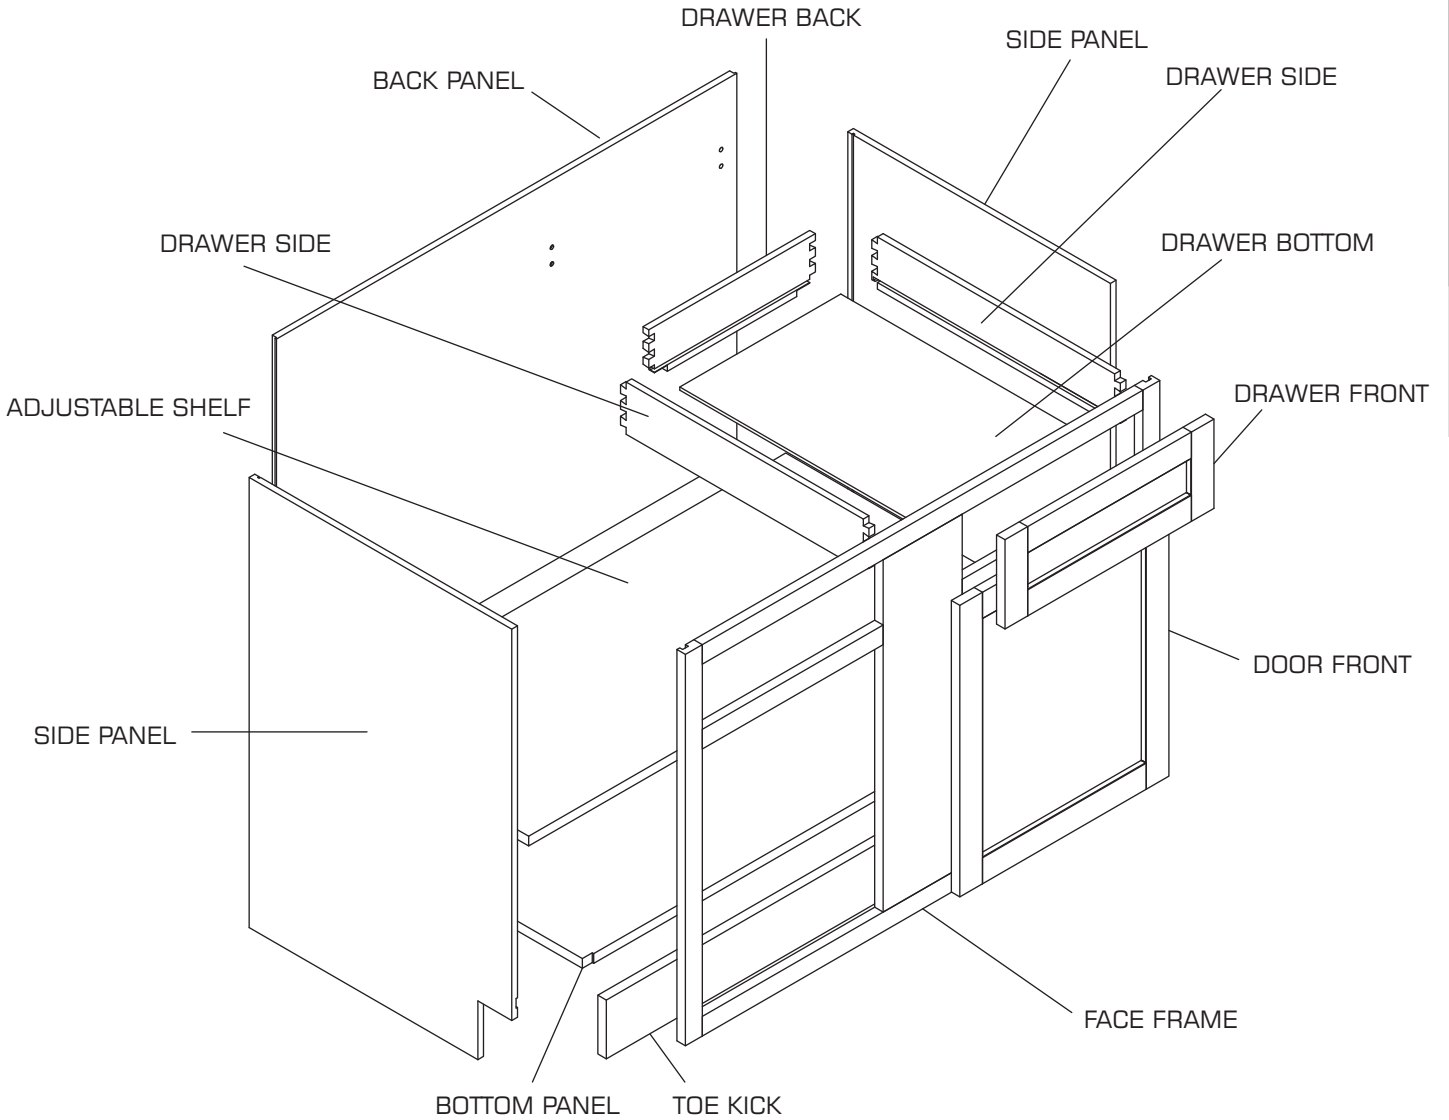


STEP 1


WOOD
GLUE

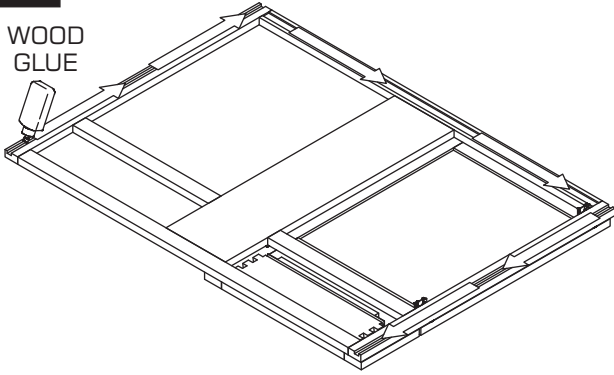


STEP 2

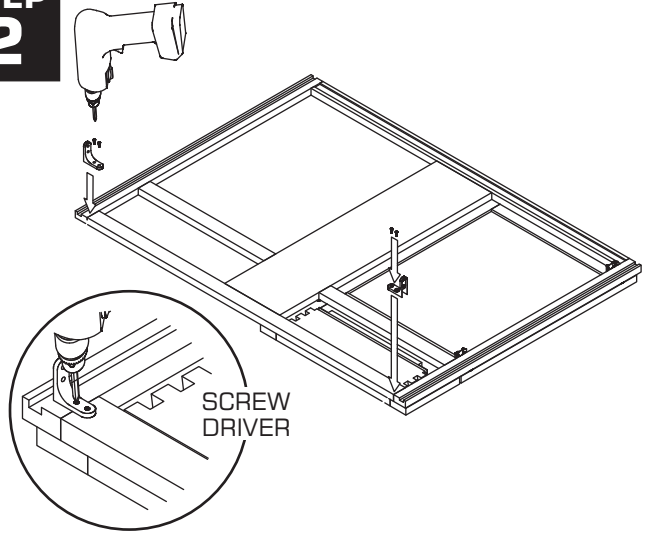


STEP 3

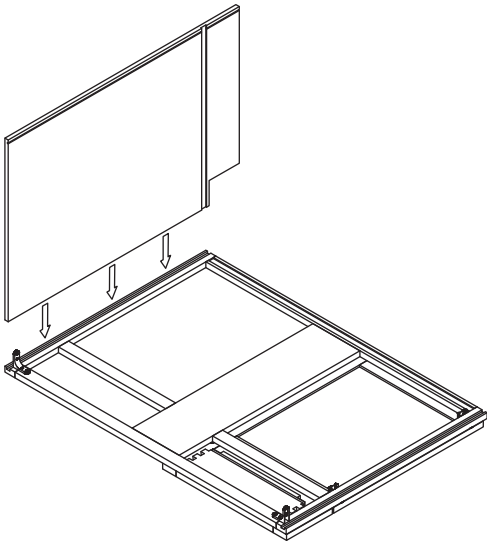


STEP 4

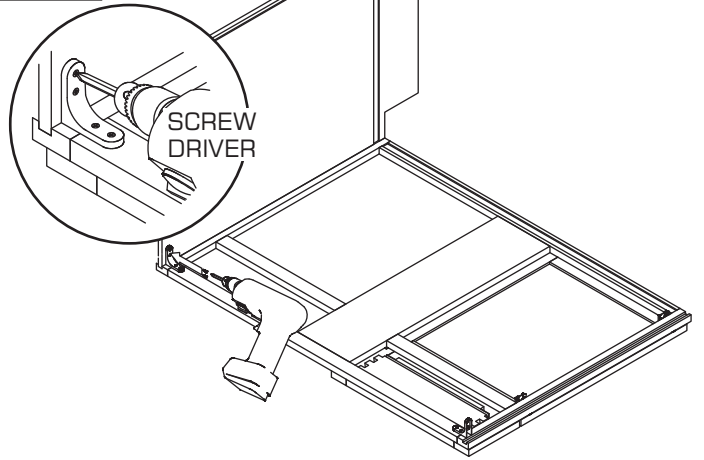


STEP 5

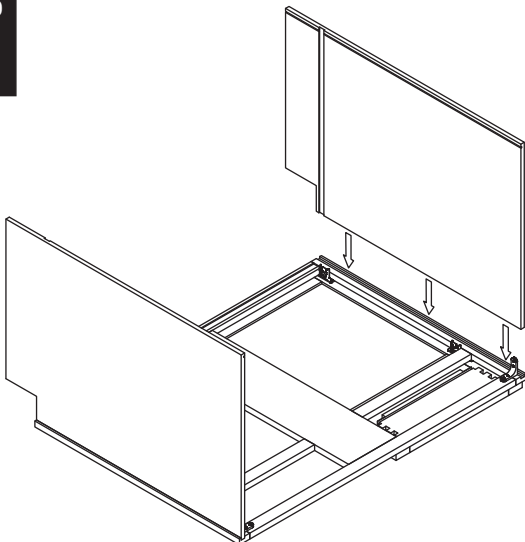


STEP 6

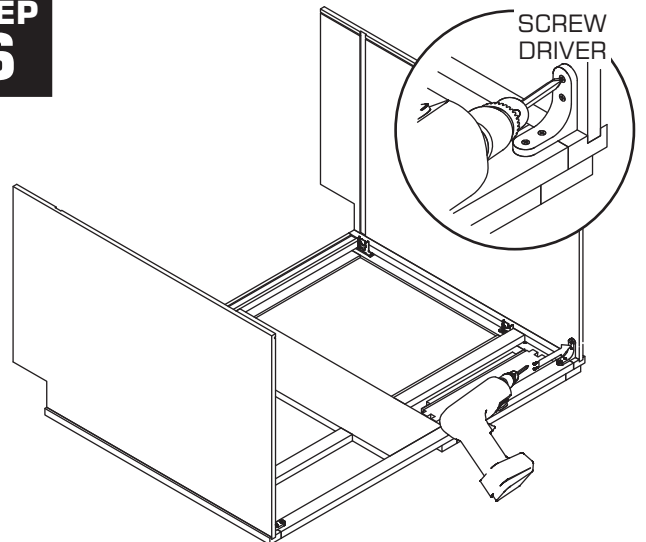


STEP 7

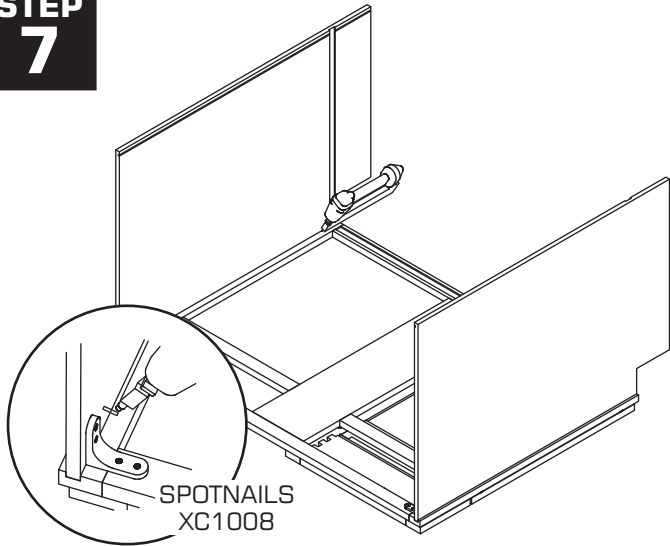


STEP 8

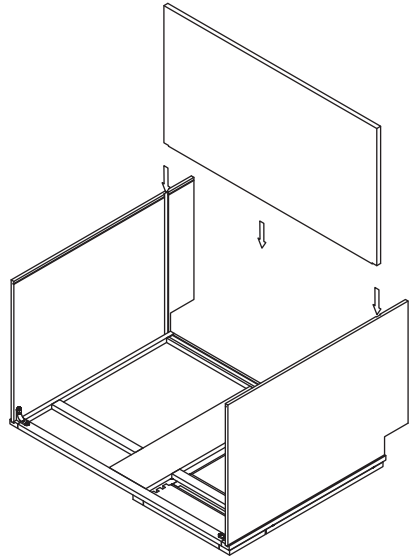


STEP 9

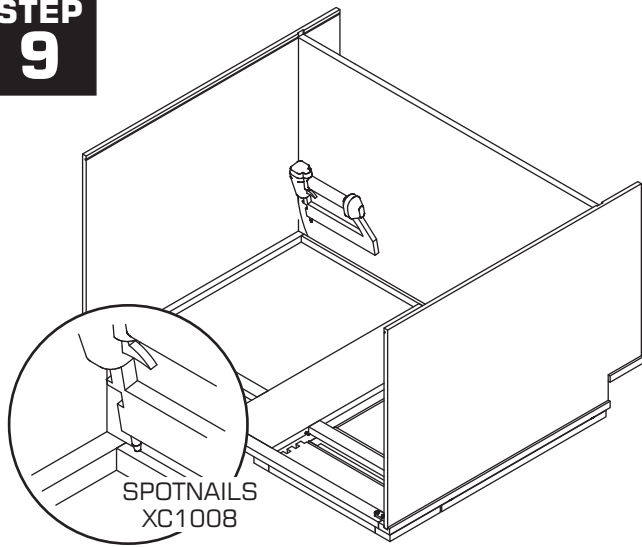


STEP 10

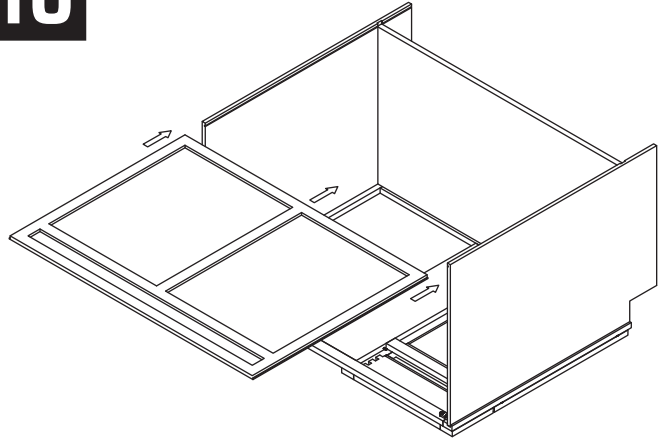


STEP 11

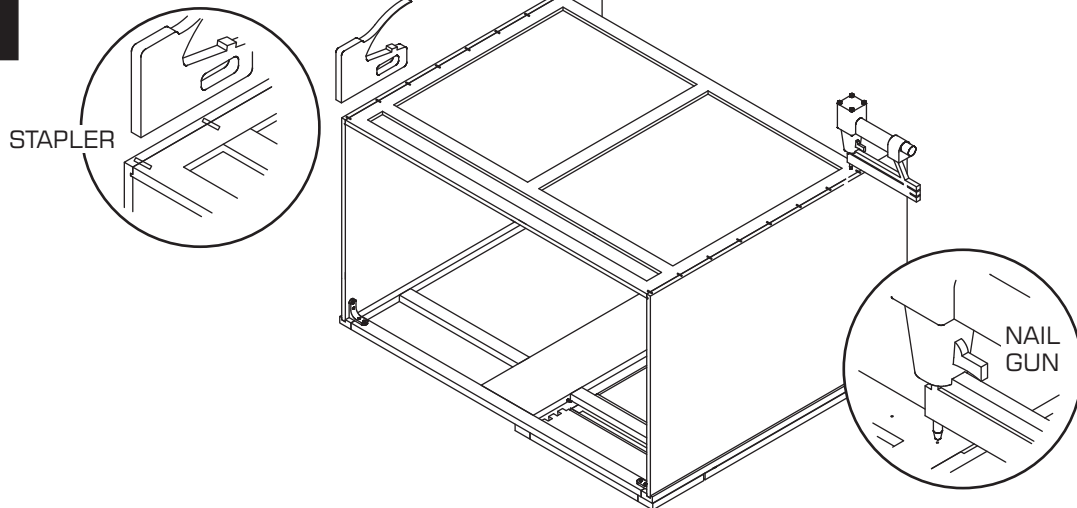


STEP 12

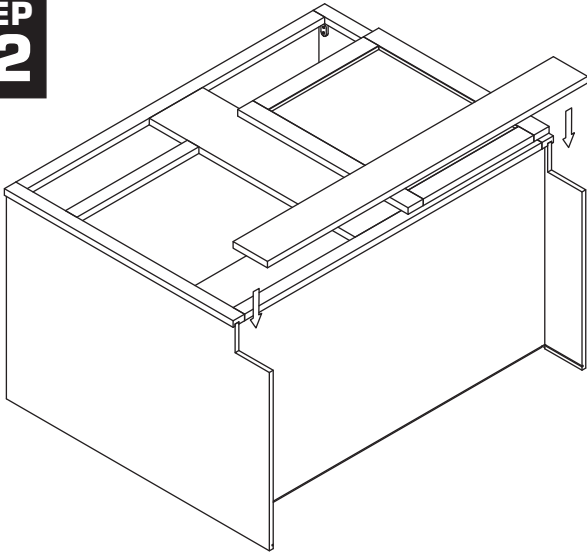


STEP 13

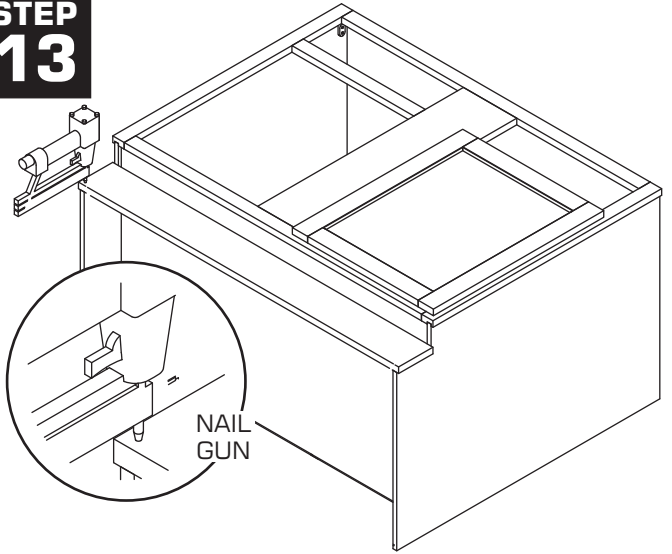


STEP 14

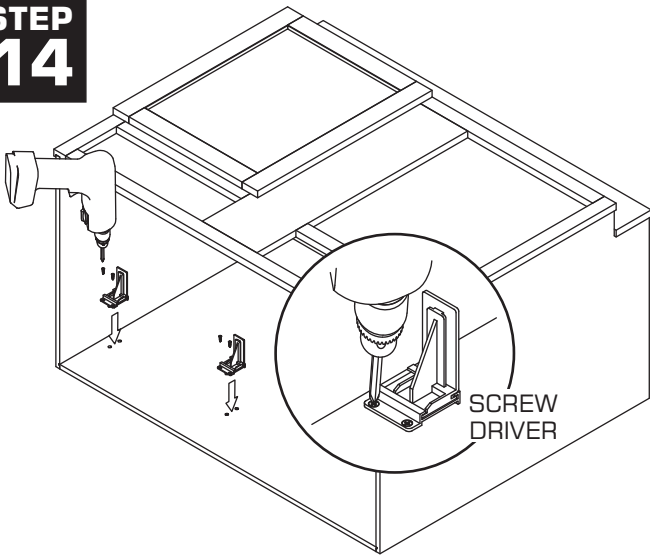


STEP 15

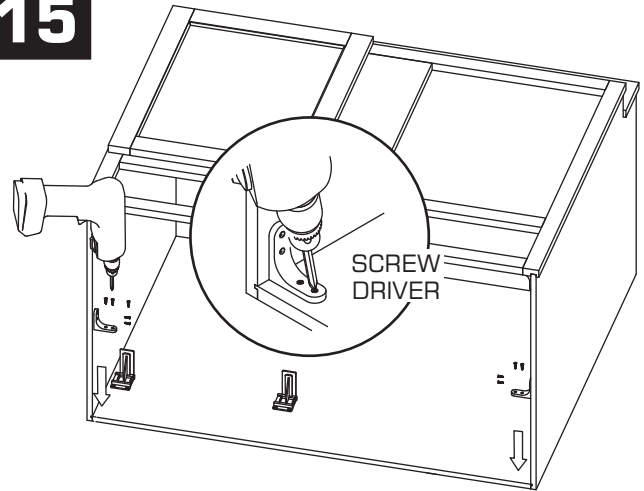


STEP 16

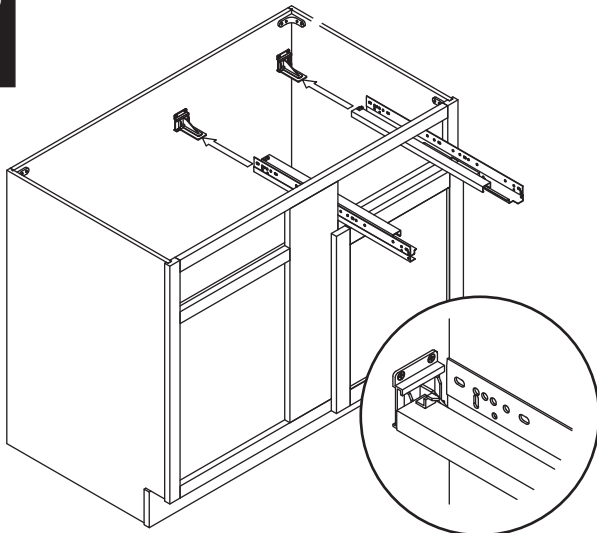


STEP 17

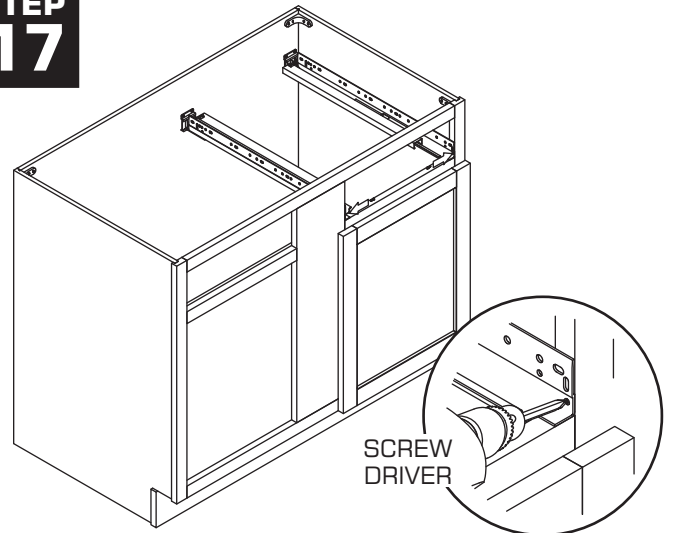


STEP 18

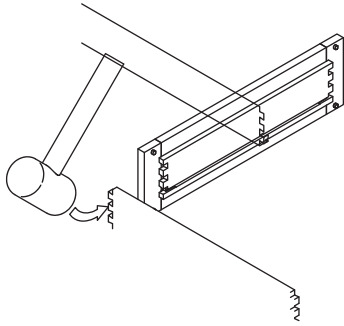


STEP 19

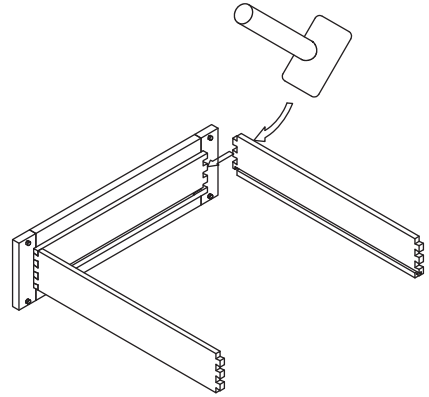


STEP 20

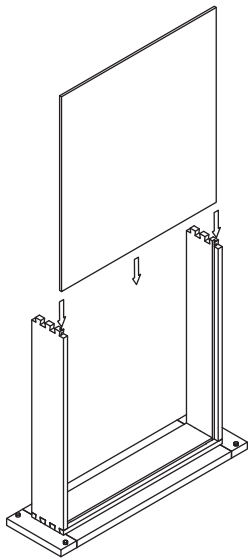


STEP 21

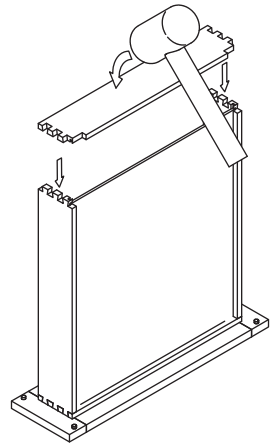


STEP 22

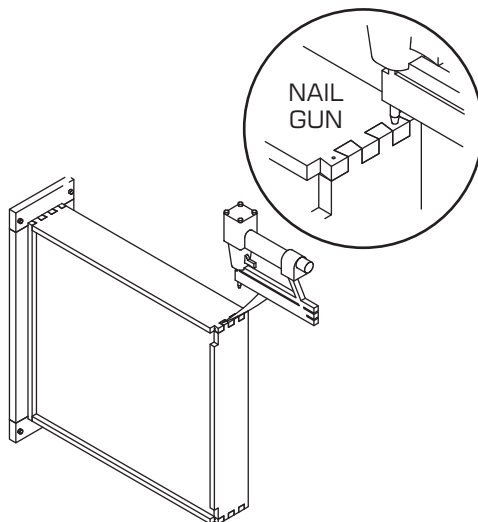


**STEP
23**

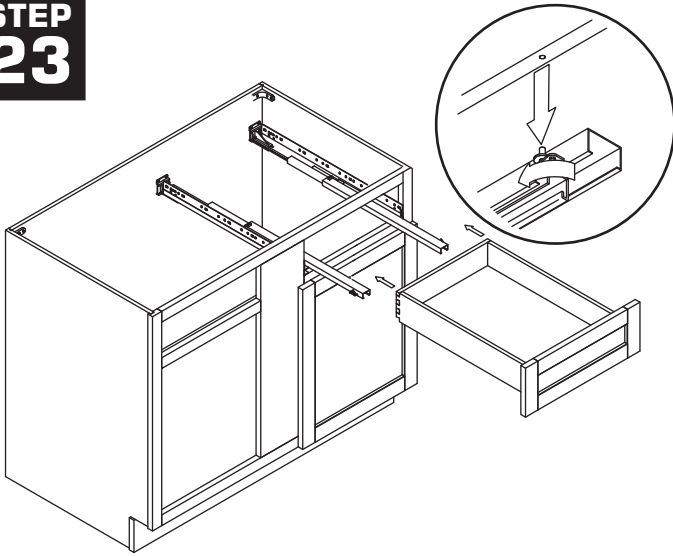


**STEP
24**

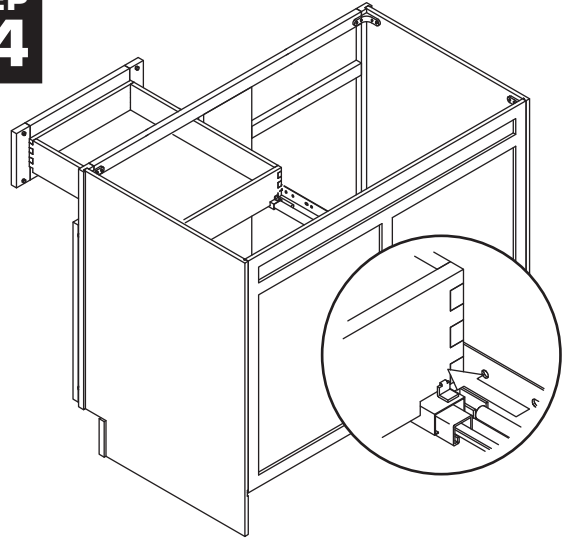

**STEP
25**

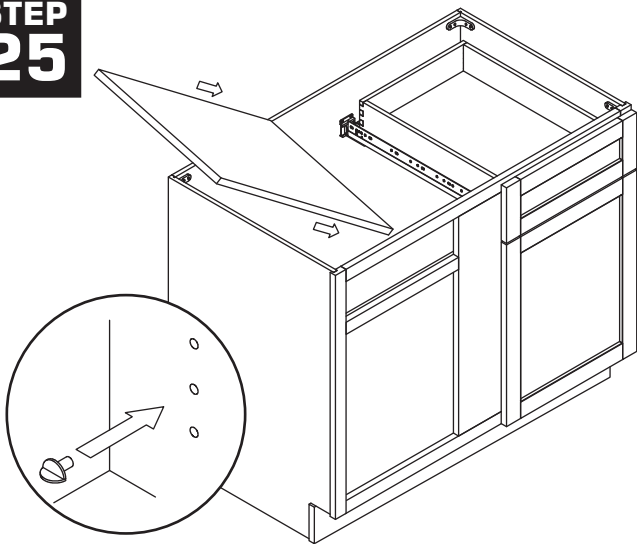

**STEP
26**

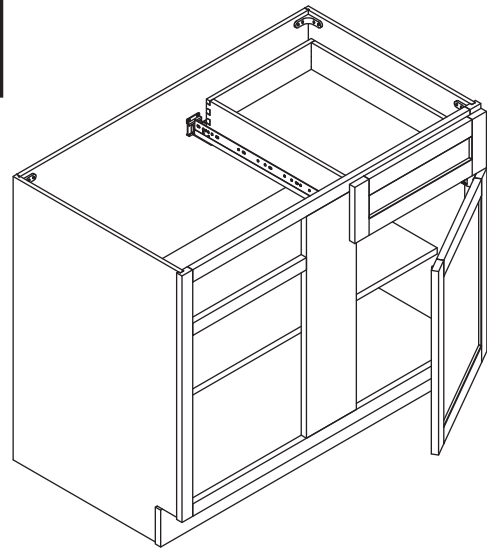

BLIND CORNER BASE CABINET